

Suzuki Swift ZC33S Catch Can Fitting Instructions

Tools needed:

- Ratchet and Socket Set
- 3mm Allen Key
- Jubilee Flexi-Driver or Flat-Blade Screwdriver
- Hose Clamp Pliers

Kit Includes:

- 1x AIRTEC Motorsport Catch Can
- 1x Mounting Bracket
- 1x Pro Hoses Silicone Hose Kit
- **Fitting Kit:**
 - 2x Straight Push Fit Connectors
 - 1x M6x18mm Hex Head Bolt
 - 2x M6 Washers
 - 1x M6 Nyloc Nut
 - 4x M5x12mm Button Head Bolts
 - 4x M5 Pan Washers
 - 2x 25mm Jubilee Clips




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions

1. Open the bonnet and remove the engine cover by lifting it up from the bottom left-hand corner to release it from its mounts.




2. Locate the original oil breather hose and using the hose clamp pliers move the hose clamps so that the hose can be removed from the car.

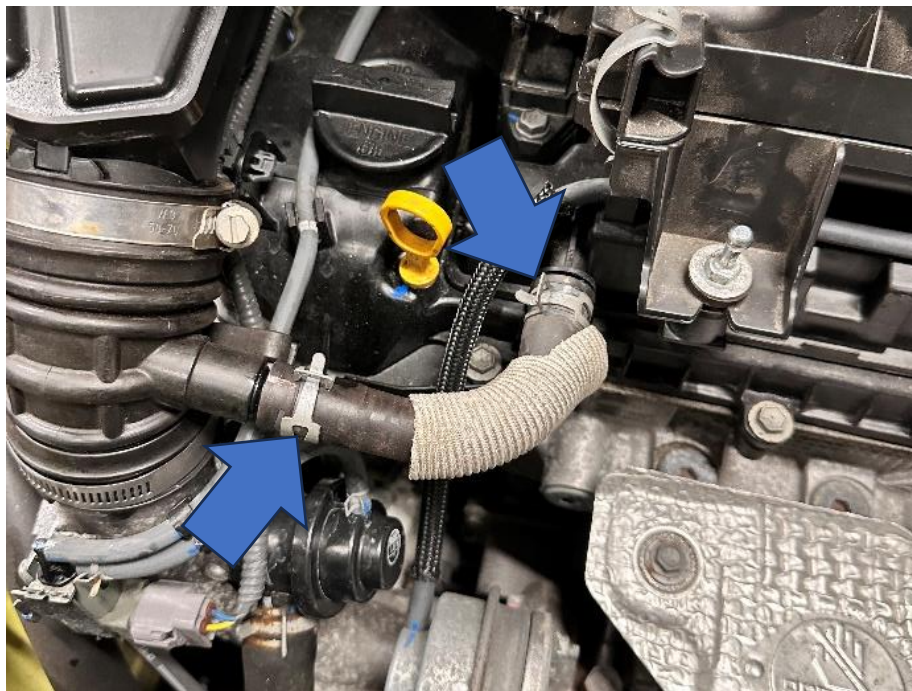

3. Fit the bracket to the catch can using the supplied Button Head bolts and washers in the position shown.



4. Install the catch can assembly onto the car using the supplied M6 bolt, Nyloc nut with washers to secure.

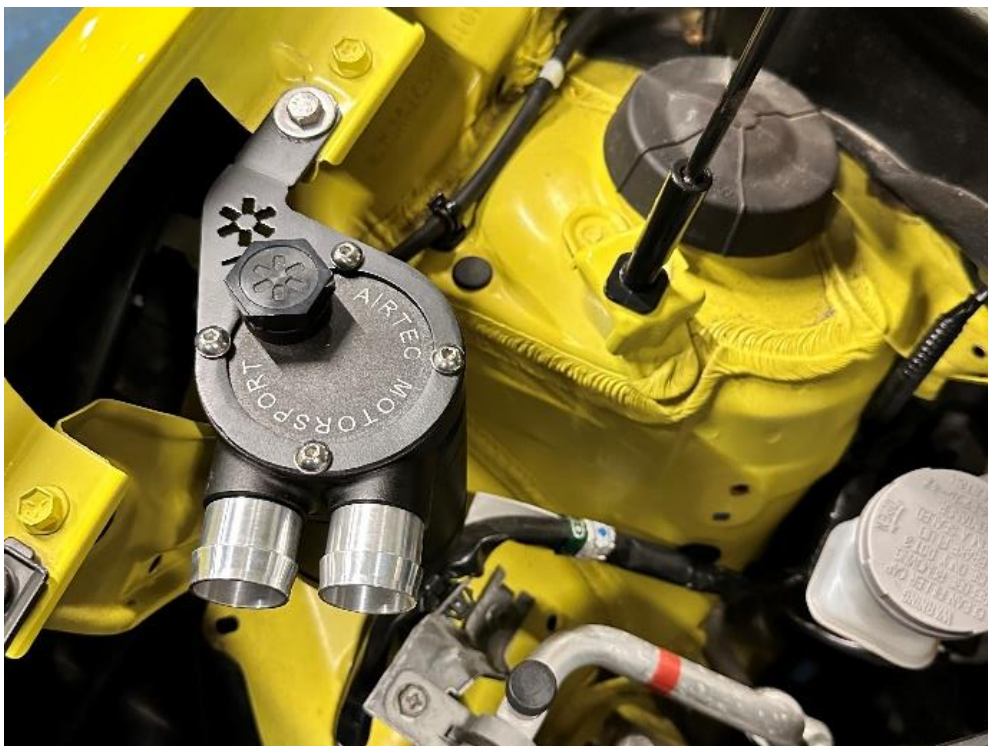

5. Install the push fit connectors onto the tops of the silicone hoses and then install the hoses in the position as shown and secure using the supplied jubilee clips.



6. Finally, reinstall the engine cover and check all connections are tight. **Please note: We recommend that you periodically check the level of the catch can and drain when necessary.**



AIRTEC 
MOTORSPORT

AIRTEC 
MOTORSPORT

