

Suzuki Swift Induction Hose Fitting Instructions

Tools Needed:

- Jubilee Flexi-Driver
- Flat-Blade Screwdriver
- Hose Clamp Pliers

Kit Contents:

- 1x Pro Hoses Induction Hose
- **Fitting Kit:**
 - 2x 70mm Jubilee Clips
 - 1x 25mm Jubilee Clip




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR
WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions

1. Open the bonnet and remove the engine cover by lifting it from the lower left-hand side.



2. Remove the hose going from the air box to the turbo by undoing the two jubilee clips securing it in place. **(Please note:** This car is fitted with the AIRTEC Motorsport breather hose. If fitted with the original breather hose, you will need hose clamp pliers to remove.)

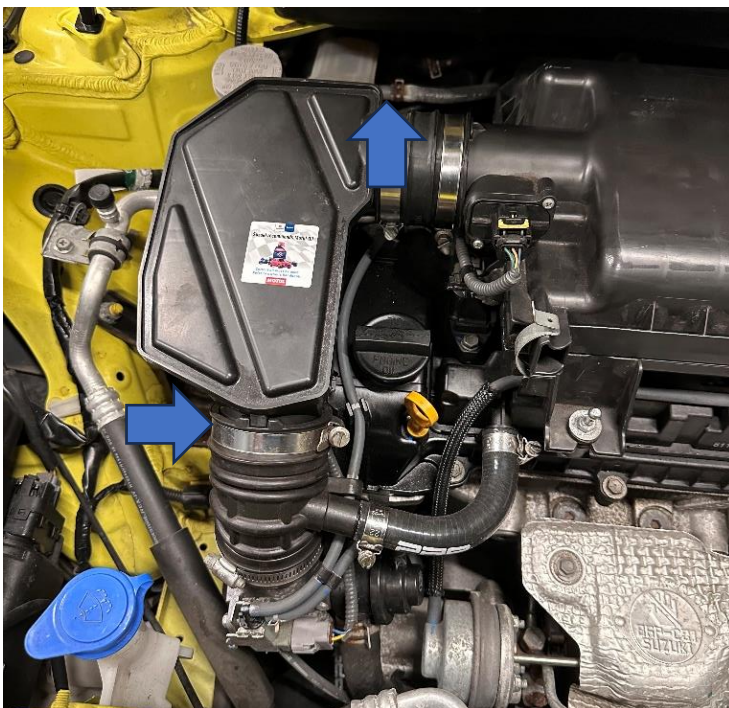

ORIGINAL HOSE

3. Finally, remove the plastic fitting from the original induction hose by pulling it and install it into your new AIRTEC Motorsport hose securing with the supplied jubilee clip. The hose can then be installed into the car using the supplied jubilee clips and the breather hose can be reattached. Then reinstall the engine cover. **(Please note:** The car shown is fitted with our optional catch can kit installed).

