

Renault Megane Mk4 RS

Torque Mount Fitting Instructions

Tools Required:

- Ratchet
- 10mm Socket
- 21mm Socket
- Trim Removal Tool or Flat-Blade Screwdriver

Kit Contents:


- 1x AIRTEC Motorsport Torque Mount
- 4x Polyurethane Bushings
- 2x Metal Inserts
- 2x Large Washers



PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. Raise the vehicle into the air and then remove the undertray by undoing the seven 10mm bolts (blue arrows) and two plastic push fittings (orange arrows).

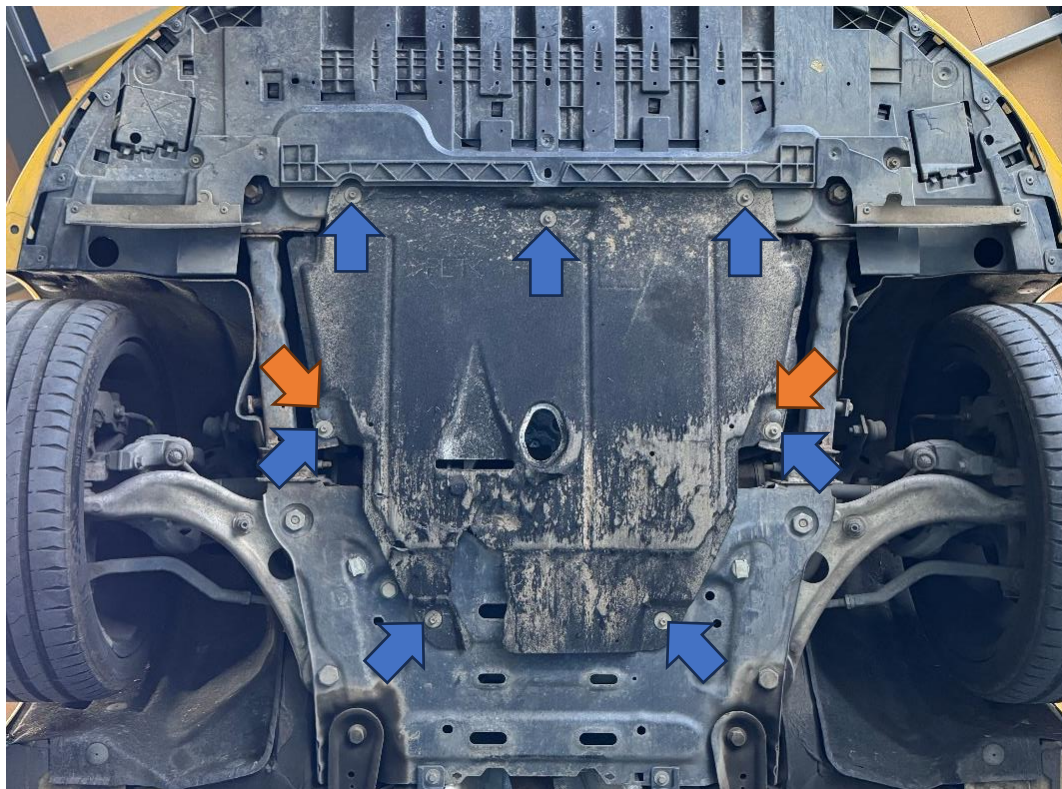

2. Locate the torque mount at the back of the engine and use a 21mm socket to remove both bolts. You can then remove the original mount from the car.



3. Ensure the two supplied washers are fitted to the outside edges of the larger bushing, as shown. Then install the new mount.

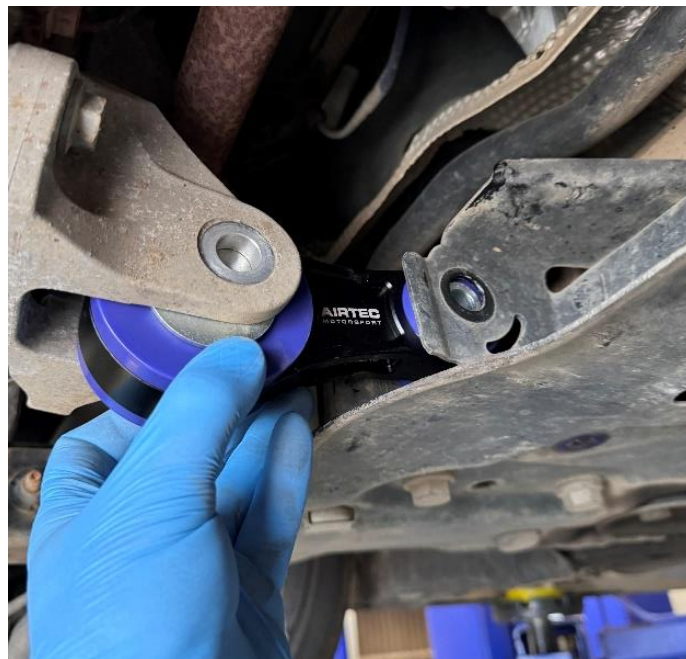

4. Finally, reuse the original bolts and fully tighten. The undertray can then be reinstalled in reverse of removal.

