

Audi S1 Torque Mount Fitting Instructions

Tools Required:

- Torx – T25
- Breaker Bar
- 16mm Socket
- 17mm Socket

Kit Contents:


- 1x AIRTEC Motorsport Audi S1 Torque Mount





PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. To release the undertray, remove the eight T25 Torx bolts. The front of the undertray then unhooks from the front bumper.

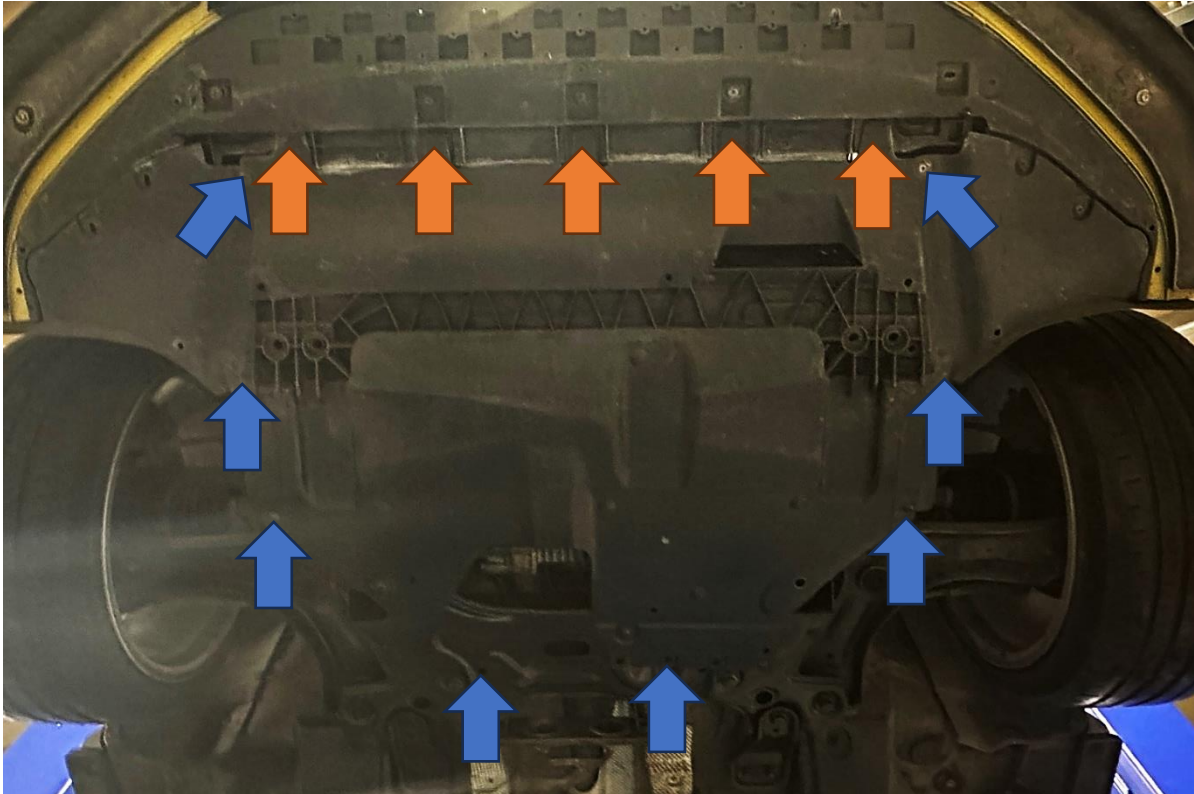


2. Locate the torque mount and loosen the connecting bolt using a 17mm spanner.

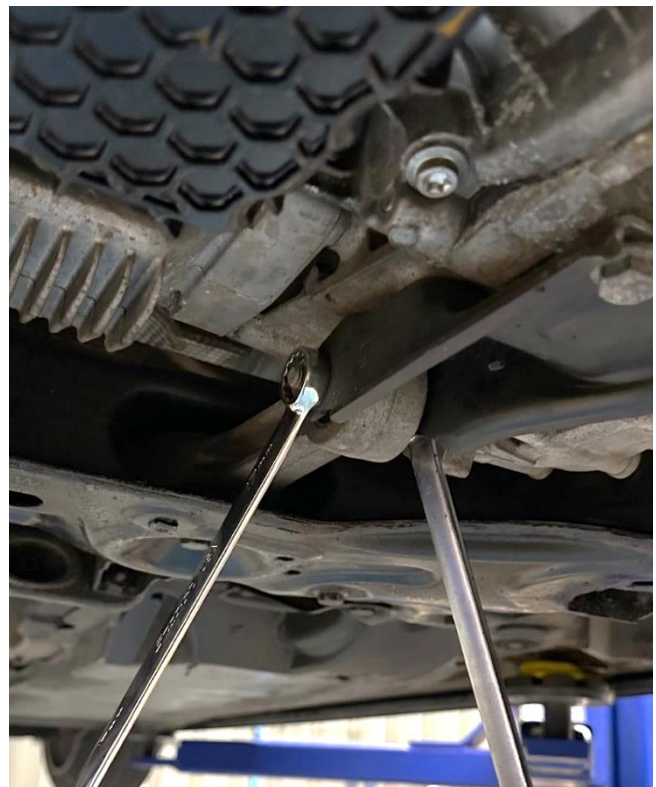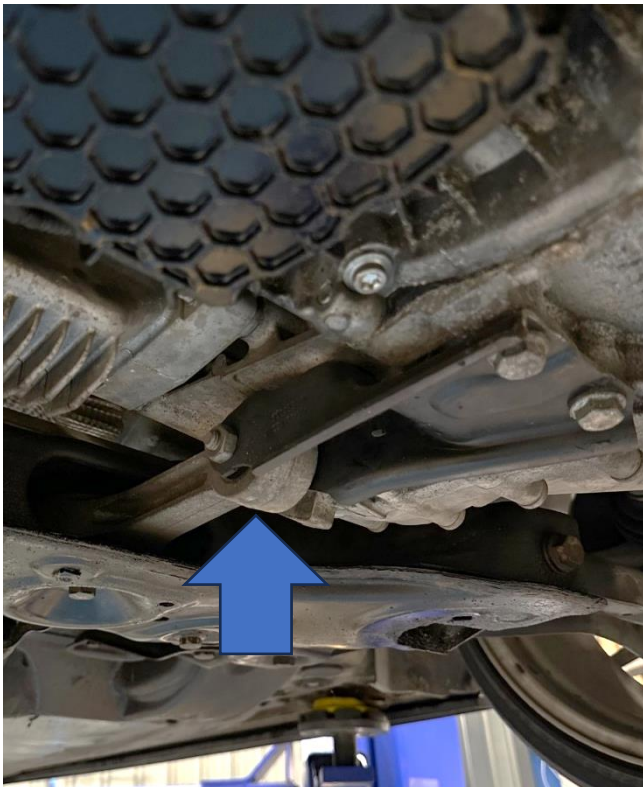

3. Use the breaker bar with a 16mm socket to remove the rear bolt.

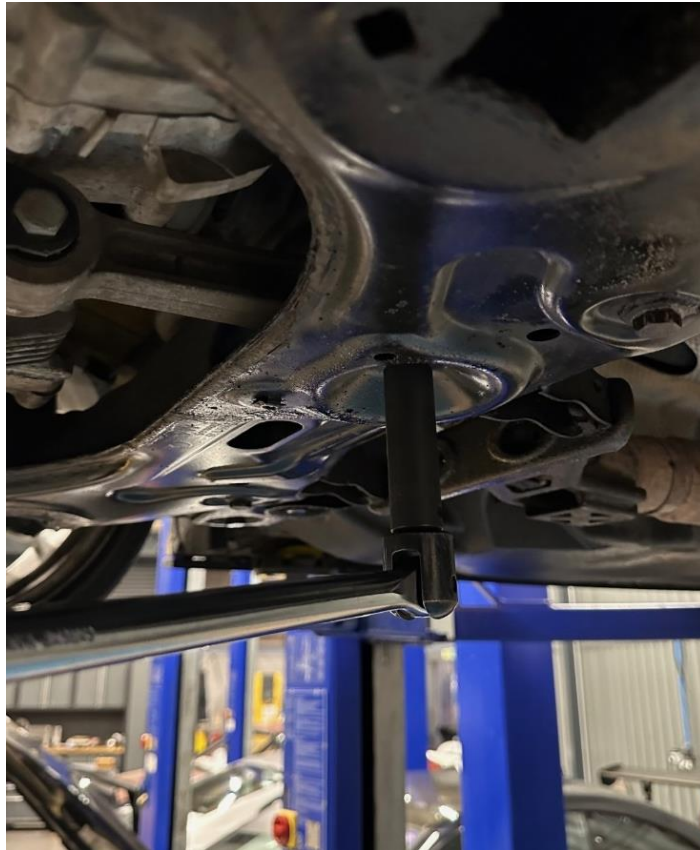

4. Undo the three 16mm front bolts to release the front bracket.

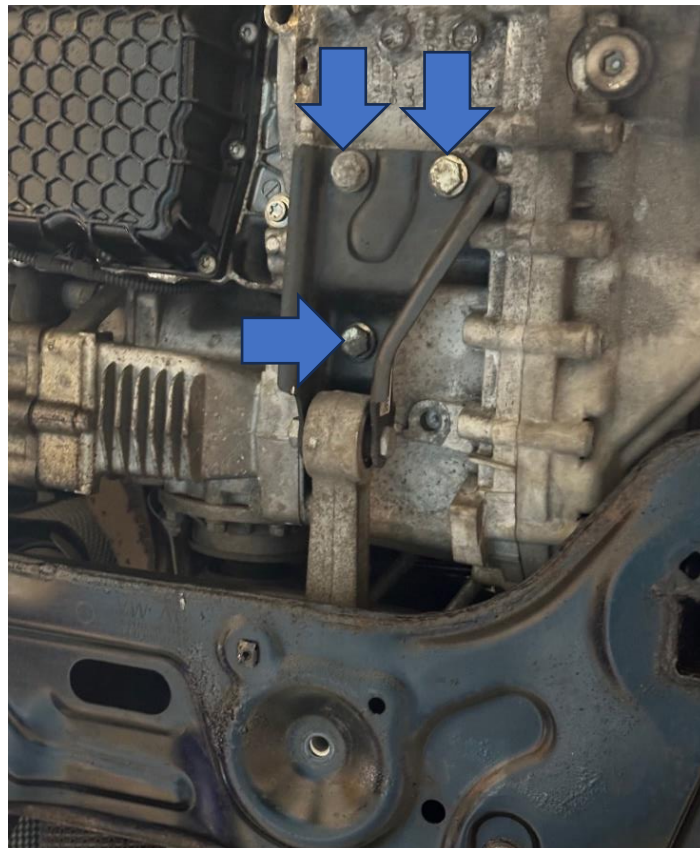

5. Remove the bolt attaching the bracket to the original torque mount and then fit the replacement AIRTEC Motorsport torque mount in place. You can then refit to the bracket and bolt to the car.



6. Finally, check everything is tight and then refit the undertray in reverse of removal.

