

# Audi S1 Torque Mount Fitting Instructions

## Tools Required:

- Ratchet
- T25 Torx Socket
- 2x 17mm Spanners/Sockets
- 16mm Socket
- Breaker Bar

## Kit Contents:


- 1x AIRTEC Motorsport Audi S1 Torque Mount





PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

# Instructions:


1. To release the undertray, remove the eight T25 Torx bolts (blue arrows). The front of the undertray then unhooks from the bumper, as shown (orange arrows).

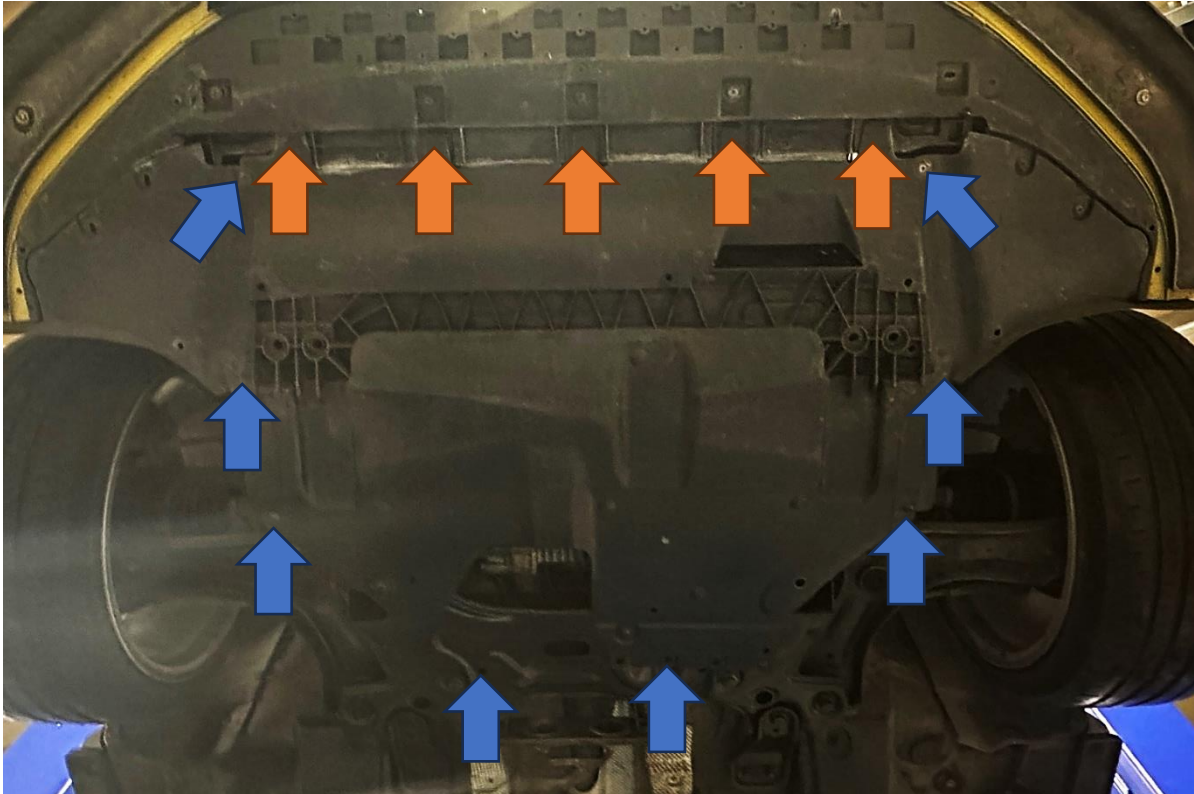


2. Locate the torque mount and loosen the connecting bolt using a two 17mm spanners/sockets.

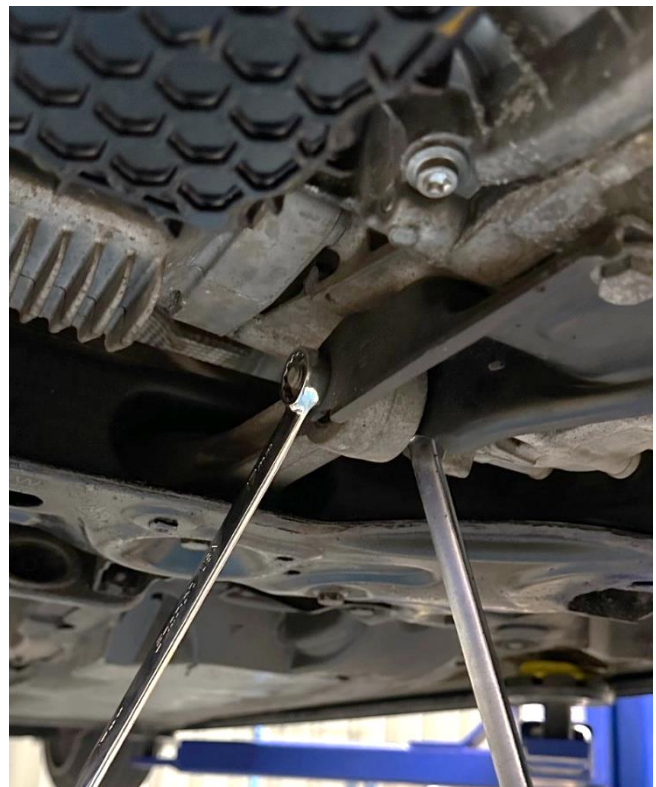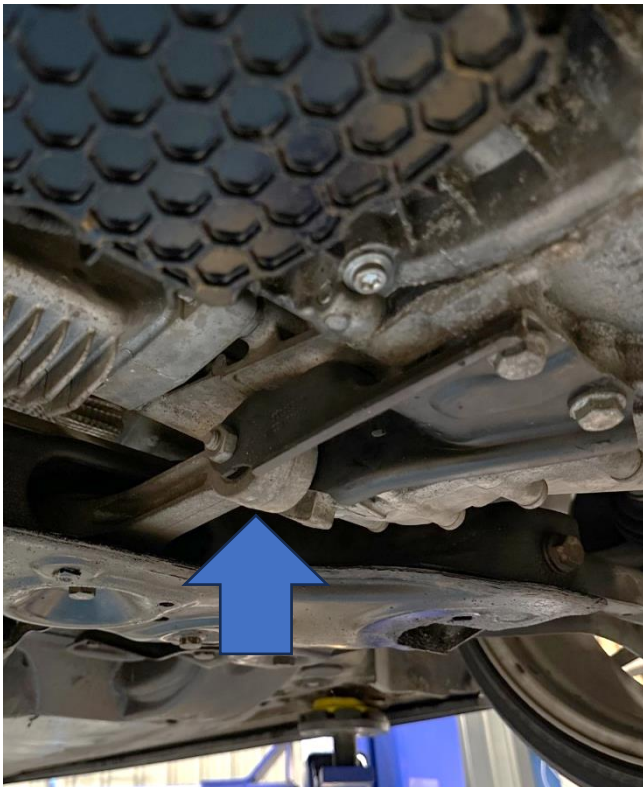

3. Use a breaker bar with a 16mm socket to remove the rear bolt that locates in the subframe.

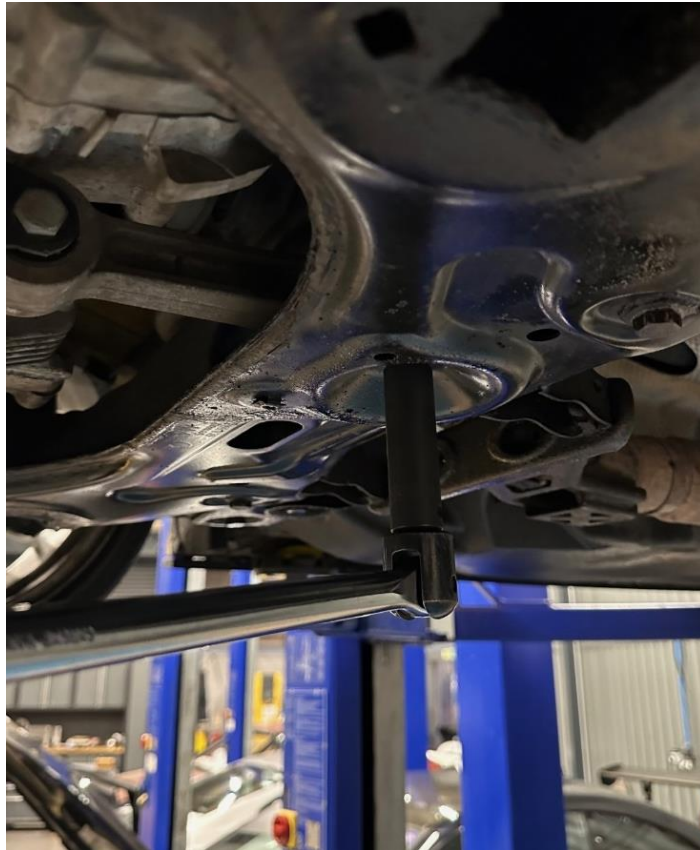


4. Undo the three 16mm bolts in the gearbox to release the front bracket.

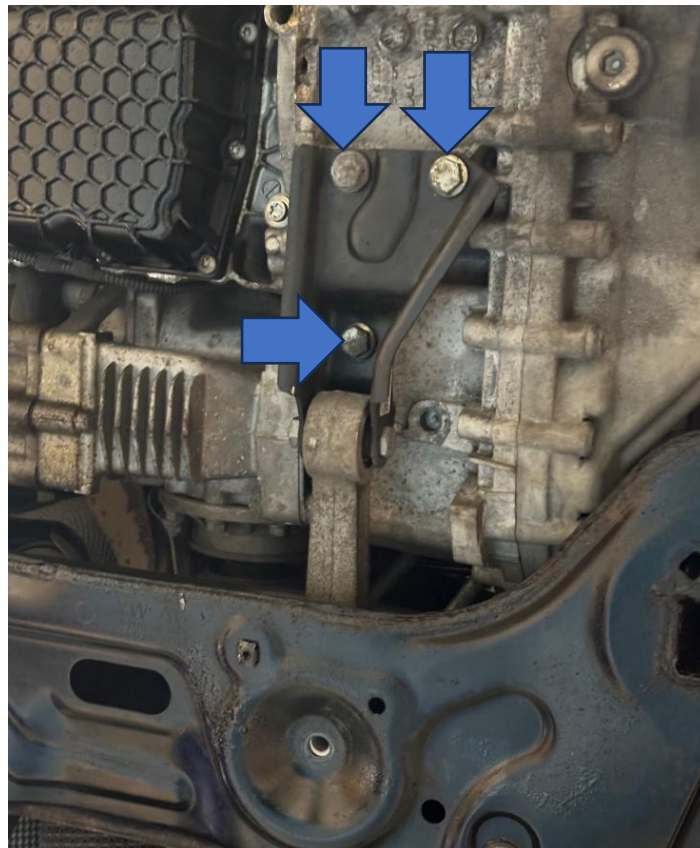



5. Remove the nut and bolt attaching the bracket to the original torque mount and then attach the bracket to the replacement AIRTEC Motorsport torque mount reusing the same nut and bolt. You can then fit the new torque mount and bracket to the car in reverse of removal.

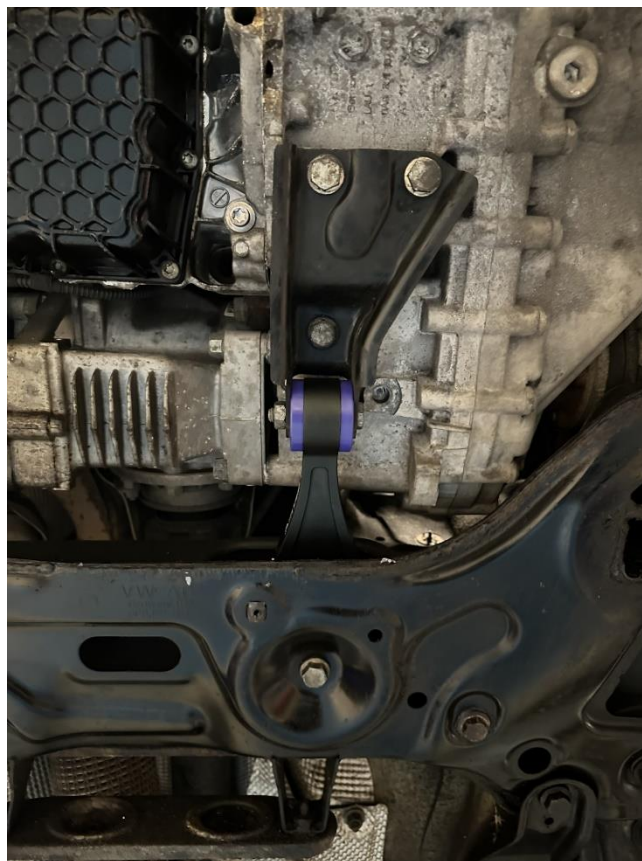

6. Finally, check everything is tight and then refit the undertray in reverse of removal.

