

# Honda Civic FL5 Type R Header Tank Fitting Instructions

## Tools Required:

- Ratchet and Socket Set
- 14mm Spanner
- Hose Clamp Pliers

## Kit Contents:

- 1x AIRTEC Motorsport Header Tank
- 1x AIRTEC Motorsport Quick Release Cap




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

# Instructions:

1. To remove the original header tank, you will need to remove a lower support bracket. Start by undoing the 10mm bolt holding the air-con lines in place.




2. Using a 14mm spanner and socket, undo the three bolts securing the lower bracket in place and remove it.

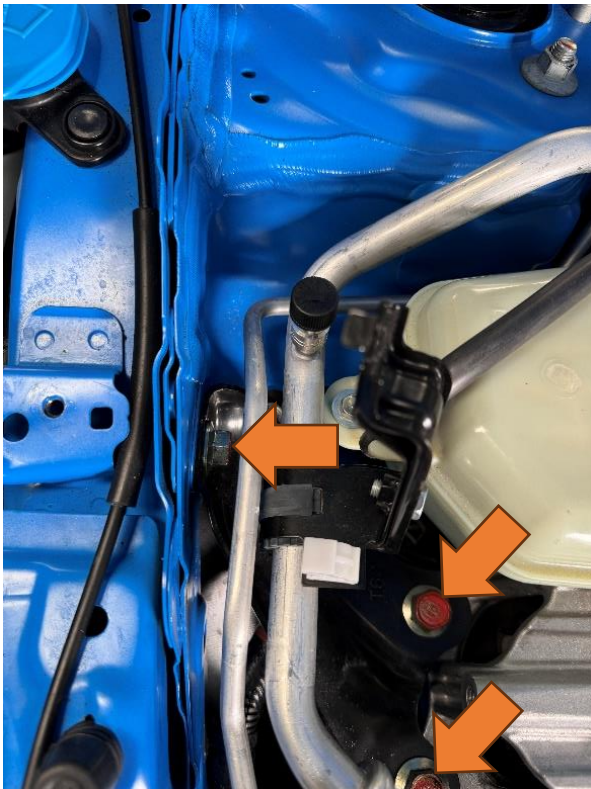




3. Now remove the two 10mm bolts securing the header tank to the car and then lift to remove it from the rubber mounting underneath.

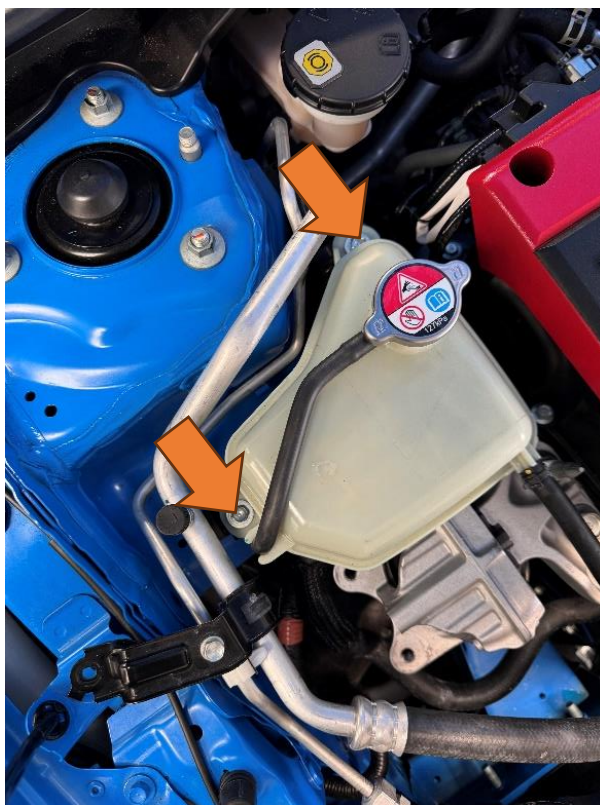

4. With hose clamp pliers (or similar) unclip and remove the original hoses. **Please note:** If you do this whilst holding the tank in the air and tilted away from the hoses then you will reduce the amount of fluid lost.



5. With the tank removed, drain its contents and then take off the original vent pipe and install it onto your new AIRTEC Motorsport tank, as shown.

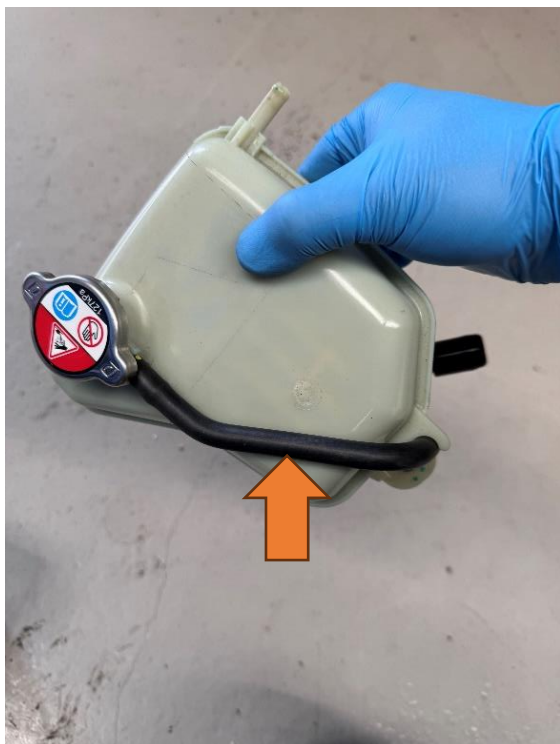

6. Finally, refit the hoses and install the new tank onto the vehicle reusing the original 10mm bolts. Then reinstall the brackets removed in Steps 1 to 2. You can then top up the tank with coolant as necessary.

