

Toyota Yaris GR OEM+ Intake Kit

Fitting Instructions

Tools Required:

- Ratchet and Socket
- Jubilee Clip Flex-Driver
- Trim Removal Tool

Kit Contents:

- 1x AIRTEC Motorsport Intake Pipe
- 1x Pro Hoses Silicone Hose
- 1x AIRTEC Motorsport Panel Filter
- 2x 80mm Jubilee Clips




PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Start removing the engine cover by firmly pulling up on each corner to release it from its rubber mounts.



2. Locate the original intake hose from the air box and loosen the two hose clamps holding it in place.

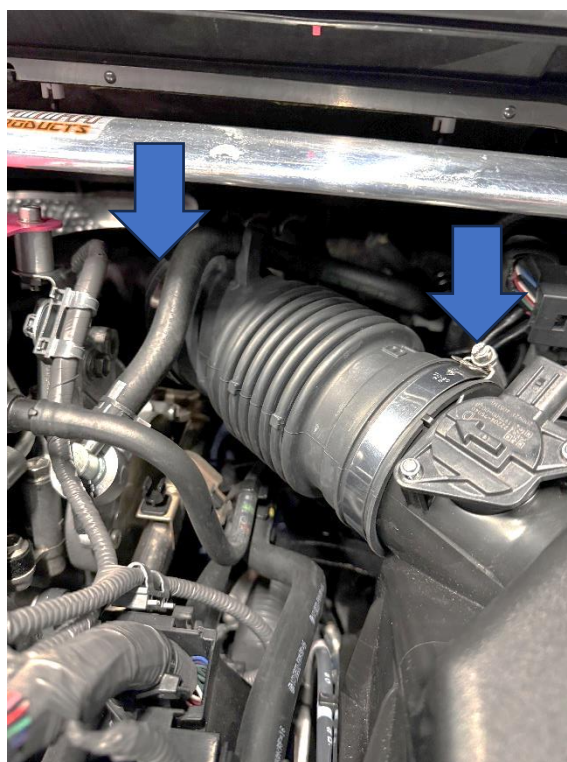

3. Follow the rear intake pipe around the back of the engine until you locate the jubilee clip securing it and loosen.





4. Locate the two 12mm bolts holding the inlet pipe in place. One bolt is easy to see at the top but the other is located out of sight underneath, so you need to locate it by hand. Then remove the wiring clipped to it using a trim removal tool and remove the pipe from the car.



5. Install the new AIRTEC Motorsport inlet pipe with using one of the original 12mm bolts on the top to secure it. Do not fully tighten the jubilee clip yet to allow for adjustment.



6. Undo the air box lid by unclipping the two clamps at the front and lift the lid. Remove the original panel filter and replace with the supplied AIRTEC Motorsport panel filter and then reattach the lid.

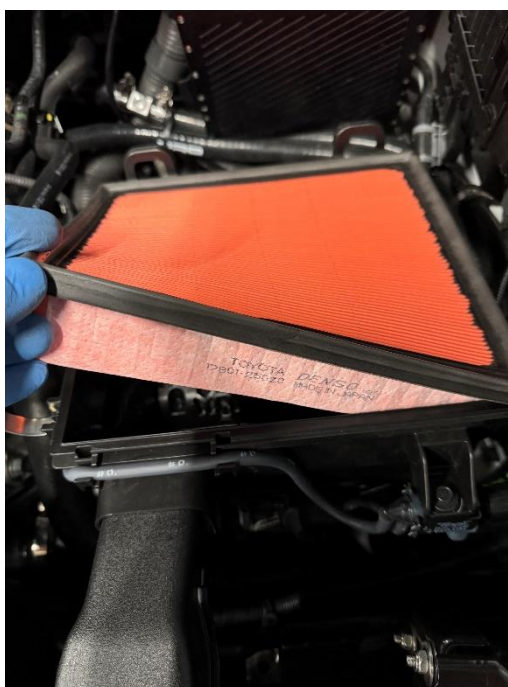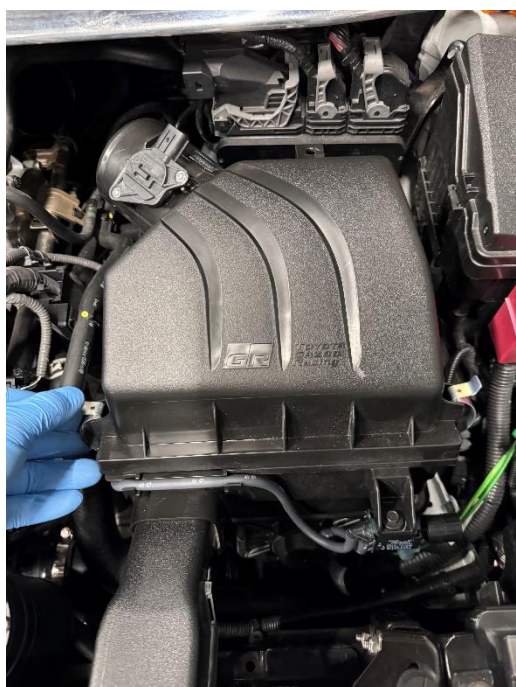

7. Finally, install the supplied silicone hose onto the rear pipe with a jubilee clip and then install onto the air box with the second jubilee clip. Once happy with the positioning, fully tighten all jubilee clips.

