


Ford Fiesta ST150 Number Plate Air Vent Panel Fitting Instructions

Tools Required:

- Ratchet and 10mm Socket (if removing bumper)
- 8mm Spanner
- 3mm Allen Key
- Drill and 6.5mm Drill Bit
- Dremel Tool or Similar Cutting Tool

Kit Contents:



- 1x AIRTEC Motorsport Air Vent Panel
- 8x M5x15mm Button Head Bolts
- 8x M5 Nyloc Nuts
- 8x M5 Mud Guard Washers

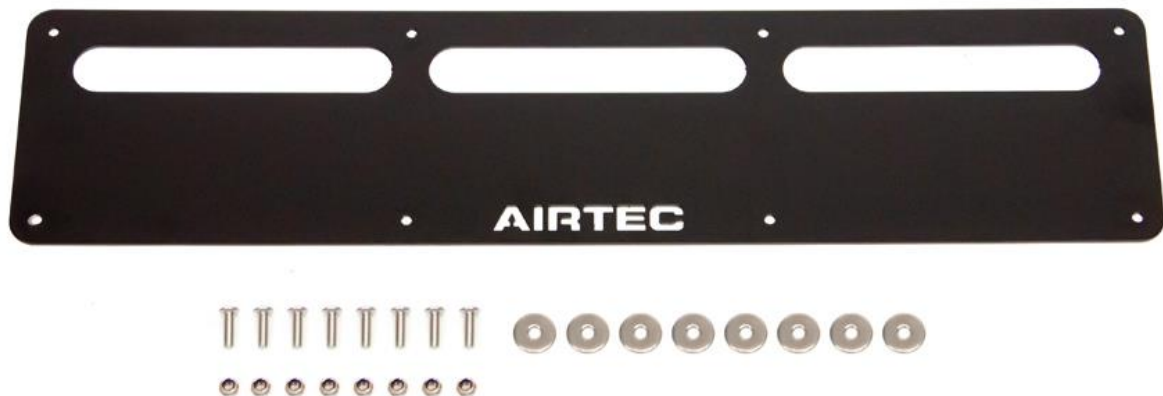


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions



1. Firstly, you don't have to remove the bumper to fit the air vent panel, but it does make things easier. If you choose **not** to remove the bumper, you will need to remove the upper grille by releasing the two clips by the headlights and pulling it carefully to release. Then skip to Step 4.

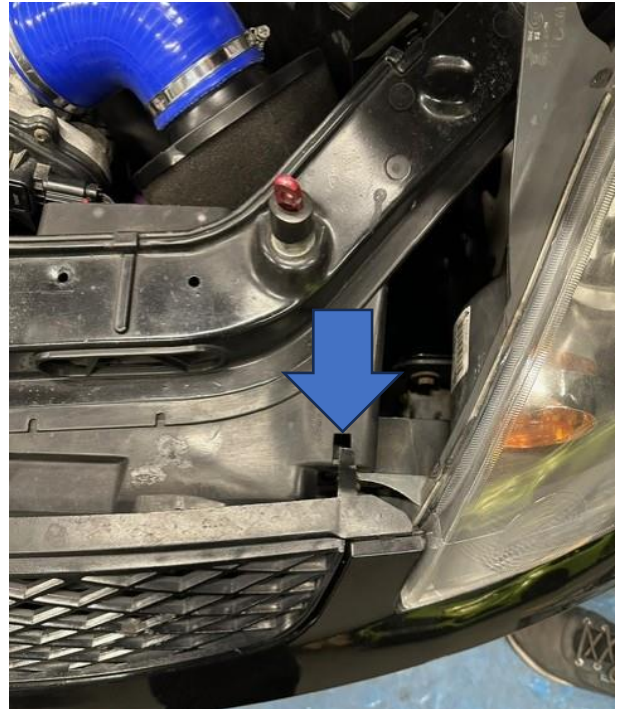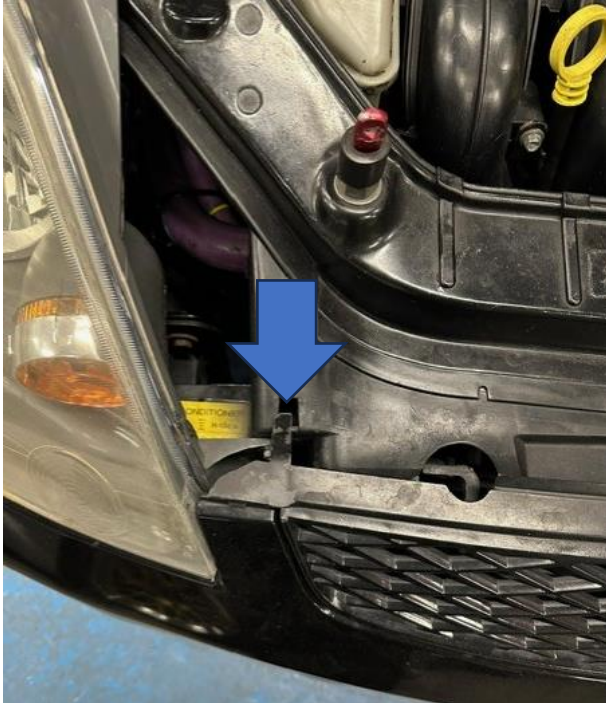


2. If you choose to remove the bumper, remove the grille first and then locate and remove the 10mm screws inside the wheel arch on each side of the bumper. Then where the bumper meets the wing, carefully but firmly pull down to unclip both parts.

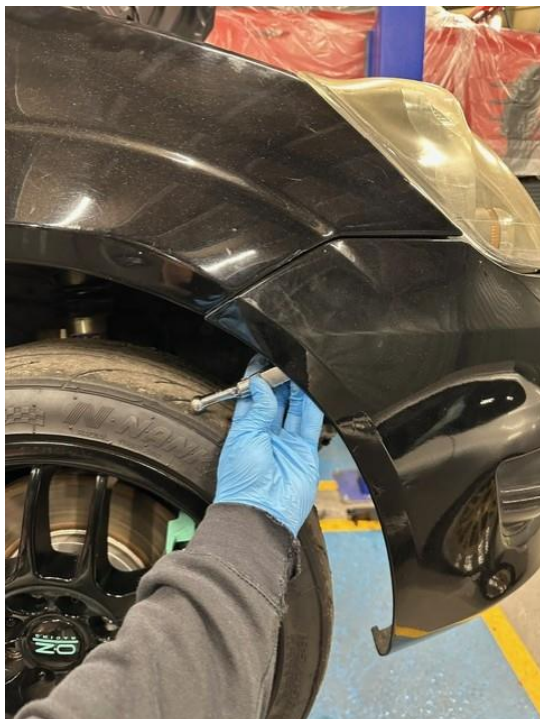

3. Move to the top of the bumper and unclip the three centre tabs, as shown.

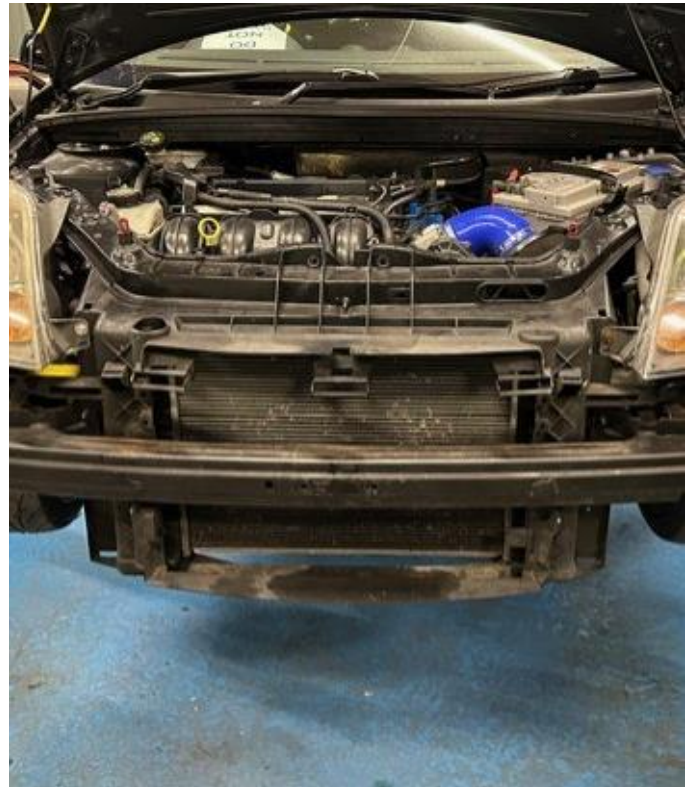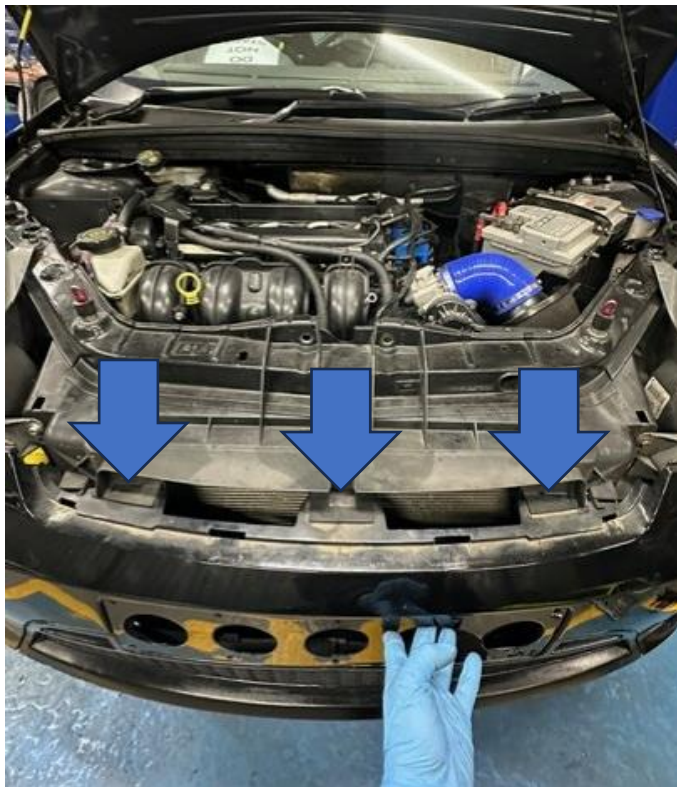


4. Place the air vent panel over the number plate recess and make sure it's perfectly centred before marking out the eight holes, as shown. Then drill out the marks using a 6.5mm drill bit.

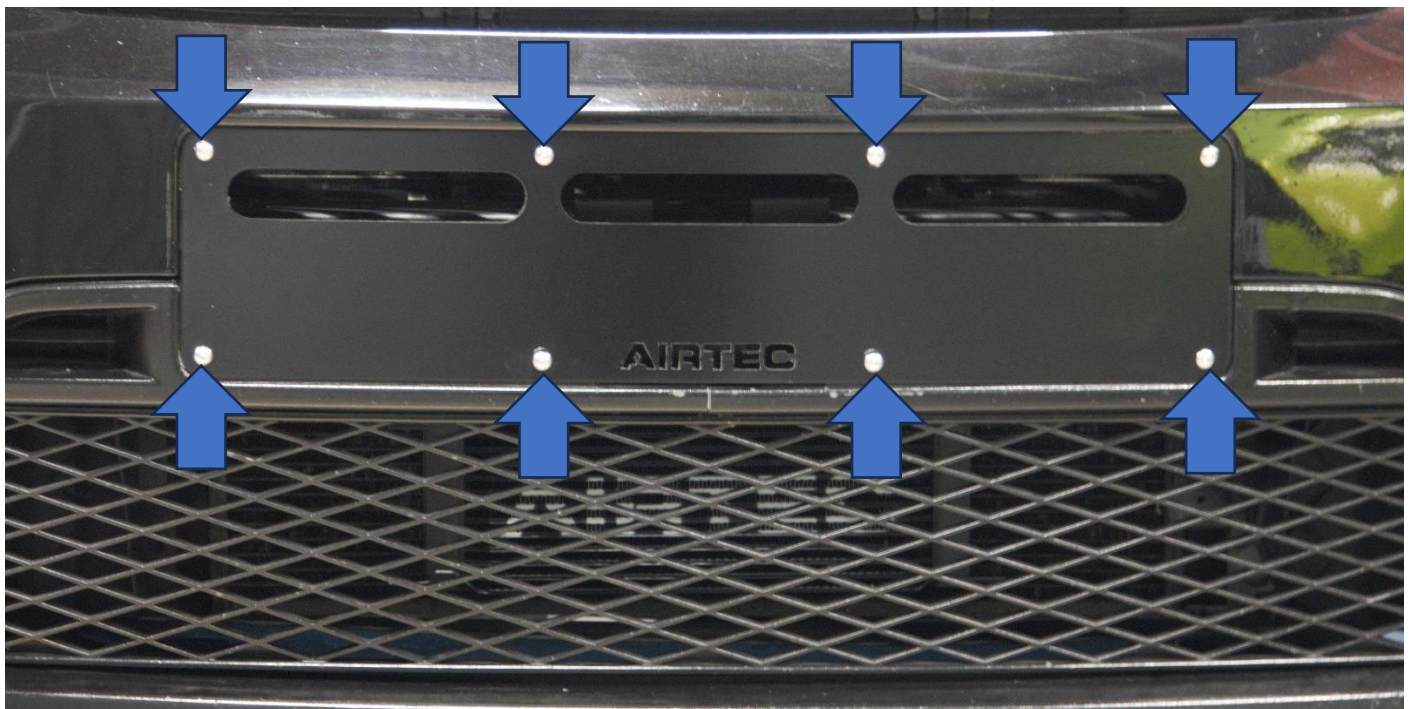

5. Once the holes have been drilled, remove the plate and mark out approximately 25mm from the outer edge of the recess lip. Before cutting, make sure all of the drilled holes are undisturbed.

Then carefully cut out the section using a Dremel tool or similar. At the centre of the bottom edge (blue arrow), cut a 100mm section all the way back to the lip for the laser cut AIRTEC logo to work.

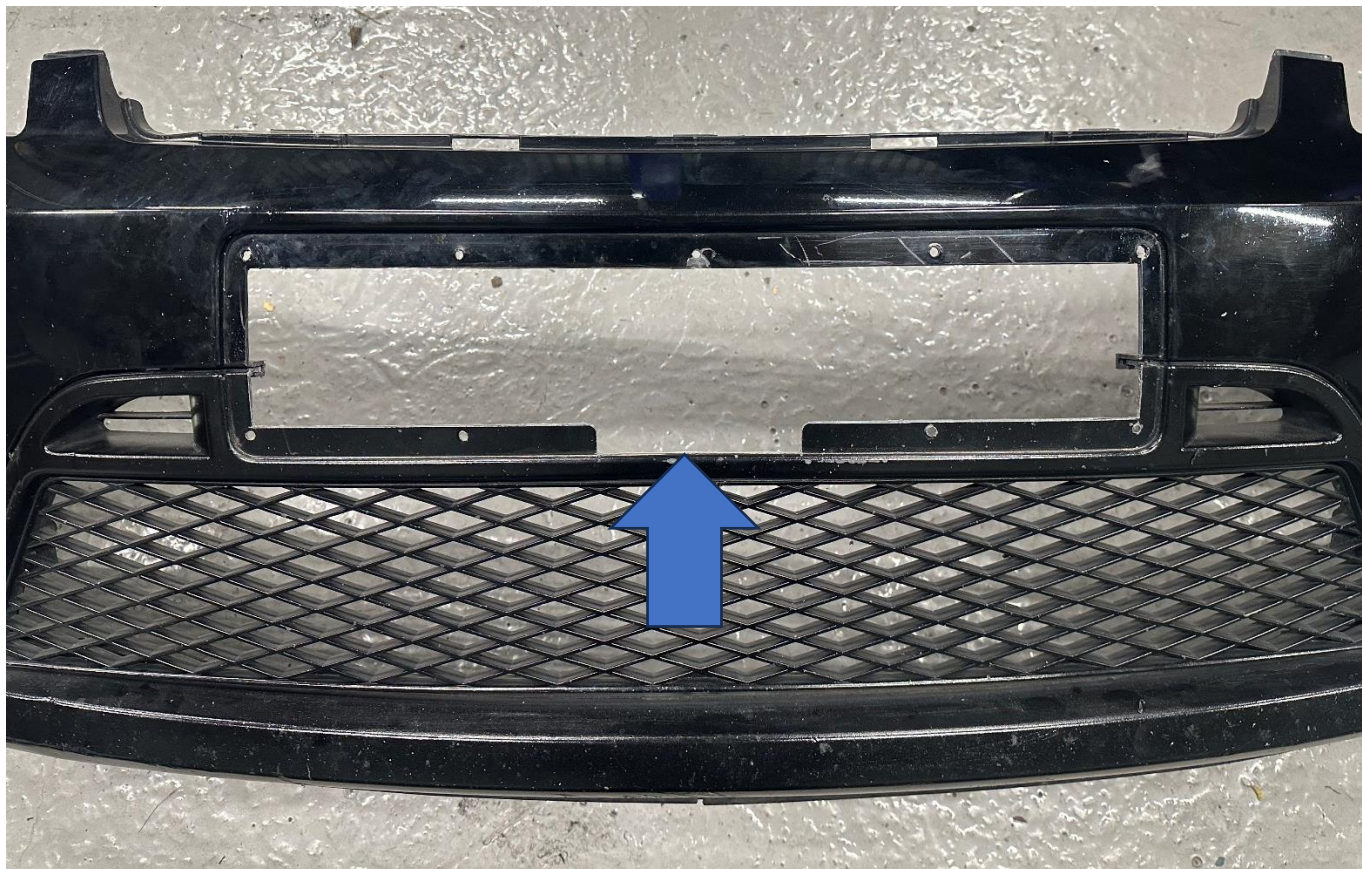

6. Finally, use the supplied nuts, bolts and washers behind to fit the air vent panel. You can then refit the bumper and/or grille in reverse of removal.

